

MAINTENANCE SCHEDULE

	FREQUENCY	Which ever comes first	INITIAL			Refer to page			
			MAINTENANCE				REGULAR		
							MAINTENANCE INTERVAL		
				mi	100		600	1200	
	km	150	1000	2000					
	NOTE	HOURS	20	100	200				
EMISSION RELATED ITEMS	* FUEL LINE				I	—			
	* THROTTLE OPERATION				I	88			
	* CARBURETOR CHOKE				I	93			
	AIR CLEANER	(NOTE 1)			C	C	89—91		
	AIR CLEANER HOUSING DRAIN TUBE	(NOTE 2)			I	I	92		
	SPARK PLUG				I	I	101		
	* VALVE CLEARANCE			I	I	I	102		
	ENGINE OIL			R	R	R	27,96—99		
	* ENGINE OIL STRAINER SCREEN					C	—		
	* ENGINE OIL CENTRIFUGAL FILTER					C	—		
	* ENGINE IDLE SPEED			I	I	I	94		

I: Inspect and Clean, Adjust,
Lubricate or Replace if necessary.

C: Clean R: Replace

A: Adjust L: Lubricate