

Air Cleaner Housing Drain Tube

The air cleaner housing drain tube (Fig. 4-7) should be serviced in accordance with the Maintenance Schedule. (*Riding through water may require more frequent inspection.*) If deposits can be seen in the drain tube, the tube must be cleaned before starting the vehicle.

To clean the drain tube:

1. Remove the drain tube (1) by removing the clip (2).
2. Drain the deposits.
3. Reinstall the drain tube, securing it with the clip.

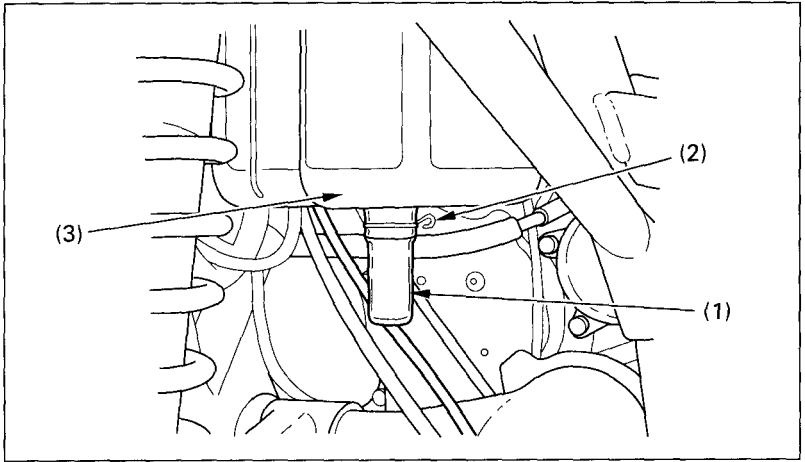


Fig. 4-7

(1) Drain tube
(2) Clip

(3) Air cleaner housing