

D	
Dimmer switch	18
Dipstick	25, 94
E	
Emission control system	135
Engine	
Idle speed adjustment	92
Break-in procedures	ii
Engine guard	121
Flooded engine	56
Starting the engine	53
Engine oil	
Changing oil	94
Checking oil level and adding oil	94
Oil filler cap/dipstick	25, 94
Recommendations	95
Engine stop switch	14
Exhaust system	
Cleaning	33
Purging	122
F	
Final gear case oil	98
Flag pole bracket	27
Flooded engine	56
Fuel	
Fuel recommendations	84
Fuel fill cap	23, 82
Fuel tank capacity	82
Fuel valve	24
High altitude fuel mixture adjustment	93
Refueling	82
Reserve fuel supply	24
Fuse	
Location	105
Replacement	106