

# Maintenance Schedule

ITEMS		FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
			⇔	mi	100	600	1200	
				km	150	1000	2000	
			NOTE	HOURS	20	100	200	
NON EMISSION RELATED ITEMS		REAR FINAL GEAR CASE OIL				(REVERY 2 YEARS)		96
	*	BRAKE FLUID	NOTE 3					114
	*	BRAKE SHOE WEAR	NOTE 1					121
	*	BRAKE PAD WEAR	NOTE 1,2					116
		BRAKE SYSTEM						113
	*	REVERSE LOCK SYSTEM						107
		SKID PLATES, ENGINE GUARD						130
	*	CLUTCH SYSTEM						106
	*	SUSPENSION						—
	*	SPARK ARRESTER				C	C	131
	*	NUTS, BOLTS, FASTENERS						—
	**	WHEELS/TIRES						—
	**	STEERING SHAFT HOLDER BEARINGS						—
**	STEERING SYSTEM						—	

- \* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 182).
- \*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.