


# Reverse Lock System

## Reverse Lock System Adjustment

Refer to *Safety Precautions* on page 75 .


RIGHT SIDE

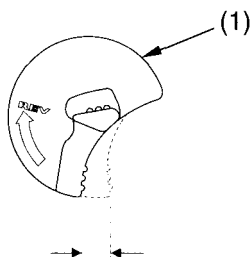

**15–21mm**  
**(0.6–0.8 in)**

- (1) reverse assist lever

RIGHT SIDE

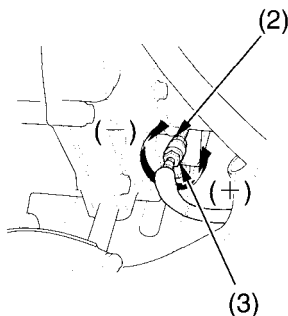

- (+) increase freeplay  
(-) decrease free play

1. Check the reverse assist lever ( 1 ) freeplay.  
15–21 mm (0.6–0.8 in)
2. To adjust, loosen the lock nut ( 2 ) and turn the adjusting nut ( 3 ).  
After adjustment, tighten the lock nut securely.

## Other Inspection

Check the reverse assist lever and cable for loose connections or other damage. If the cable is worn or kinked, have it replaced by your Honda dealer.