

//////////////////// CONTENTS //////////////////////

| | Page | | Page |
|-------------------------------|------|----------------------------|------|
| FOUR TRAX SAFETY..... | 1 | Tool Kit | 44 |
| Safe Riding Rules | 3 | Engine Oil and Filter..... | 45 |
| Protective Apparel..... | 3 | Fuel Strainer..... | 46 |
| Modifications | 3 | Carburetor..... | 47 |
| Loading and Accessories | 4 | High Altitude | 48 |
| DESCRIPTION..... | 6 | Spark Plug..... | 50 |
| Parts Location..... | 6 | Air Cleaner | 51 |
| Serial Numbers | 8 | Valves | 52 |
| Parts Function..... | 9 | Clutch | 55 |
| Fuel..... | 21 | Breather Tube..... | 55 |
| Engine Oil..... | 23 | Brakes..... | 56 |
| Tires | 25 | Throttle Cable..... | 61 |
| Battery | 26 | Final Drive Oil..... | 62 |
| OPERATION | 27 | Spark Arrester..... | 63 |
| Pre-Ride Inspection..... | 27 | STORAGE GUIDE | 64 |
| Starting the Engine | 28 | TRANSPORTING..... | 66 |
| Break-in..... | 31 | SPECIFICATIONS | 69 |
| Riding..... | 32 | WIRING DIAGRAM | 70 |
| Parking | 41 | WARRANTY SERVICE | 73 |
| MAINTENANCE..... | 42 | | |
| Maintenance Schedule..... | 42 | | |