

Fuse Replacement

The main fuse, located near the battery box, is 20A. When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair.

WARNING

- * *Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire may result, causing a dangerous loss of lights at night or engine power.*

CAUTION

- * *Turn the ignition switch OFF before checking or replacing the fuse to prevent accidental short-circuiting.*

Storage Compartment

The storage compartment is at the rear of rear fender. Pull the rubbers (1) up to open.

WARNING

- * *Do not carry more than 2.3 kg (5 lbs) of cargo in the storage compartment.*



(1) Rubbers