


VALVES

Valve clearance should be maintained at 0.08 mm (0.003 in). Excessive clearance will cause noise. Insufficient clearance will cause loss of power and could cause valve damage.


NOTE:

* Check and adjust valve clearances while the engine is cold. The clearance will change as the temperature rises.

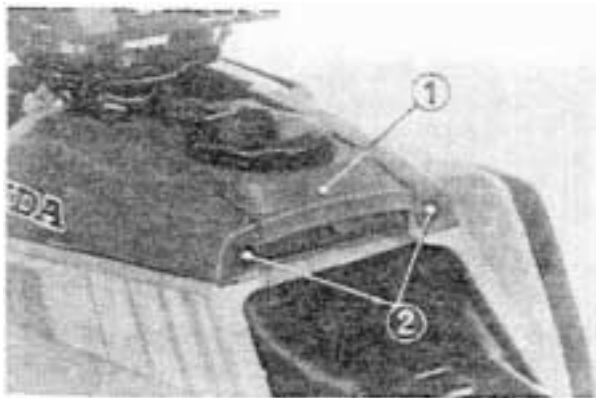

- (1) Fuel tank cover
- (2) Screws

1. Turn the fuel valve OFF and disconnect the fuel line at fuel valve.
2. Remove the fuel tank cover (1) by removing the two screws (2).
3. Remove the two fuel tank mounting bolts (3) and remove rear fender bolts (4).
4. Remove the fuel tank.
5. Remove the screw on air vent tube.
6. Remove the air cleaner case by removing two bolts.
7. Remove the air vent tube.

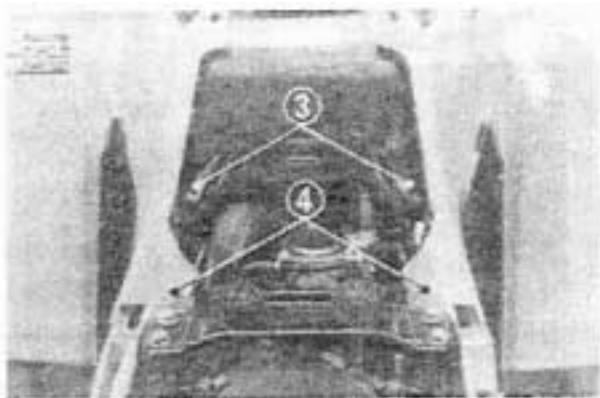

- (3) Tank mounting bolts
- (4) Rear fender bolts