

## Rear Wheel Removal


1. Place a support block under the vehicle and raise the rear wheels off the ground.
2. Loosen the wheel nuts (1).
3. Remove the wheel.

## Installation Notes:

Reinstall the rear wheels and tighten the wheel nuts (1) in a cross pattern to 60–70 N·m (6.0–7.0 kg·m, 43–50 ft·lb).

### **WARNING**

*\* If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly.*

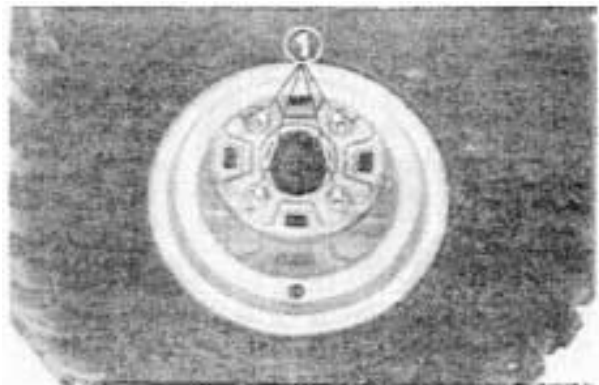

(1) Wheel nuts