


## Rear Wheel Removal

1. Place a support block under the vehicle and raise the rear wheels off the ground.
2. Loosen the wheel nuts (1).
3. Remove the wheel.

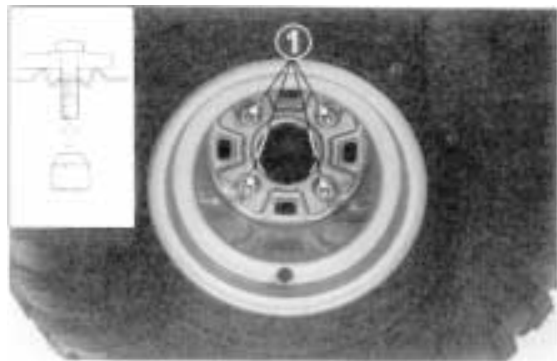

(1) Wheel nuts

## Installation Notes:

Reinstall the rear wheels and tighten the wheel nuts (1) in a cross pattern to 60—70 N·m (6.0—7.0 kg-m, 43—50 ft-lb).

### **WARNING**

- \* *If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly.*
- \* *Install the wheel nuts with their tapers on the inside as shown.*