

3. Check that the drain plug sealing washer is in good condition, then reinstall the oil drain plug securely. If necessary, replace the sealing washer.

Oil drain plug torque:

25 N·m (2.5 kgf·m , 18 lbf·ft)

4. Fill the crankcase with the recommended oil approximately:  
1.5 ℓ (1.6 US qt , 1.3 Imp qt)
5. Reinstall the oil filler cap/dipstick.
6. Start the engine and let it idle for a few minutes.
7. Stop the engine and check the oil level. Make sure the oil is between the upper and lower level marks on the dipstick.  
If necessary, add more oil but do not overfill.

**CAUTION:**

**Running the engine with improper oil level can cause serious engine damage.**

**NOTE:**

- \* To protect the environment, please dispose of used engine oil properly. We suggest you place used oil in a sealed container and take it to your local service station for reclamation. Do not put it in the trash or pour it on the ground.
- \* If a torque wrench was not used for installation, see your authorized Honda dealer before operating the vehicle to verify proper assembly.

While reading this manual, remember:

**▲WARNING**

**Indicates a strong possibility that serious injury or death may result if instructions are not followed.**