

To replace a fuse:

1. Make sure the ignition switch is ○ (OFF).

CAUTION:

Turn the ignition switch ○ (OFF) before checking or replacing the fuse to prevent accidental short-circuiting which could damage the electrical system.

2. Remove the seat (page 132).
3. Remove the fuse holder assembly (Fig. 4-18).
4. Pull the old fuse out of the fuse holder.
5. Push the new fuse in to the fuse holder.
6. Install the fuse holder assembly and seat.

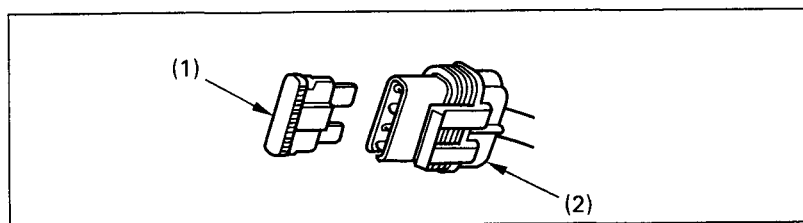


Fig. 4-19 (1) Fuse

(2) Fuse holder

⚠ WARNING

POTENTIAL HAZARD

Improperly replacing a fuse.

WHAT CAN HAPPEN

Serious damage to the electrical system, which could cause a fire or a loss of lights or engine power, which could lead to an accident.

HOW TO AVOID THE HAZARD

Never use a fuse with a different rating from that specified in this Owner's Manual.

Do not pry the clips open to get a fuse out, as a loose fuse could cause damage to the electrical system or start a fire.