

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page	
		⇨	mi	100	600	1200		
			km	150	1000	2000		
		NOTE	HOURS	20	100	200		
EMISSION RELATED ITEMS	*	FUEL LINE				I	--	
	*	THROTTLE OPERATION				I	103	
	*	CARBURETOR CHOKE				I	105	
		AIR CLEANER	NOTE 1			C	98	
		AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	102	
		SPARK PLUG				I	109	
	*	VALVE CLEARANCE			I	I	112	
		ENGINE OIL			R	R	R	90
	**	ENGINE OIL STRAINER SCREEN					C	--
	**	ENGINE OIL CENTRIFUGAL FILTER					C	--
	*	ENGINE IDLE SPEED			I	I	I	108

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 184).

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.