

# Maintenance Schedule

## Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

| ITEMS | FREQUENCY                      | WHICHEVER COMES FIRST |       | INITIAL MAINT. | REGULAR MAINT. INTERVAL |      | Refer to page |
|-------|--------------------------------|-----------------------|-------|----------------|-------------------------|------|---------------|
|       |                                | NOTE                  | mi    | 100            | 600                     | 1200 |               |
|       |                                |                       | km    | 150            | 1000                    | 2000 |               |
|       |                                |                       | HOURS | 20             | 100                     | 200  |               |
| *     | FUEL LINE                      |                       |       |                | I                       |      | —             |
| *     | THROTTLE OPERATION             |                       |       |                | I                       |      | 105           |
| *     | CARBURETOR CHOKE               |                       |       |                | I                       |      | 107           |
|       | AIR CLEANER                    | NOTE 1                |       |                | C                       | C    | 100           |
|       | AIR CLEANER HOUSING DRAIN TUBE | NOTE 2                |       |                | I                       | I    | 104           |
|       | SPARK PLUG                     |                       |       |                | I                       | I    | 111           |
| *     | VALVE CLEARANCE                |                       |       | I              | I                       | I    | 114           |
|       | ENGINE OIL                     |                       |       | R              | R                       | R    | 92            |
| **    | ENGINE OIL STRAINER SCREEN     |                       |       |                |                         | C    | —             |
| **    | ENGINE OIL CENTRIFUGAL FILTER  |                       |       |                |                         | C    | —             |
| *     | ENGINE IDLE SPEED              |                       |       | I              | I                       | I    | 110           |

\* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 188).

\*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.