


# If a Fuse Blows

## Main Fuse Access

### UNDER SEAT

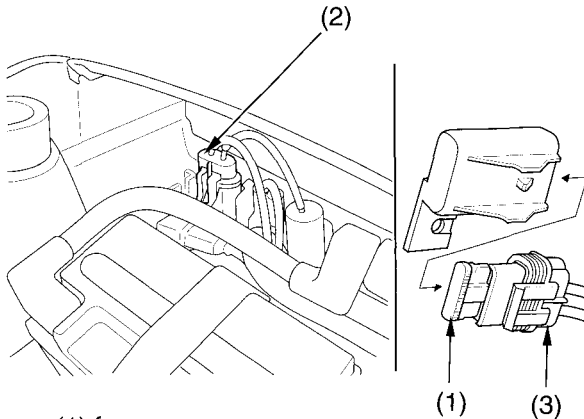

- (1) fuse
- (2) fuse holder assembly
- (3) fuse holder

1. To prevent an accidental short circuit, turn the ignition switch OFF (  $\bigcirc$  ) before checking or replacing the fuses.
2. To access the fuse ( 1 ), remove the seat (page 88).
3. Remove the fuse holder assembly ( 2 ).
4. Pull the old fuse out of the fuse holder ( 3 ).
5. Push the new fuse in to the fuse holder.
6. Install the fuse holder assembly and seat.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

### NOTICE

*Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.*