

Maintenance Schedule

| ITEMS | | FREQUENCY | WHICHEVER COMES | | INITIAL MAINT. | REGULAR MAINT. INTERVAL | | Refer to page |
|-------|--------------------------------|-----------|-----------------|-------|---------------------|-------------------------|------|---------------|
| | | | FIRST | mi | 100 | 600 | 1200 | |
| | | | ⇨ | km | 150 | 1000 | 2000 | |
| | | | NOTE | HOURS | 20 | 100 | 200 | |
| | REAR FINAL GEAR CASE OIL | | | | (RE: EVERY 2 YEARS) | | | 98 |
| * | BRAKE FLUID | NOTE 3 | | | | | | 116 |
| * | BRAKE SHOE WEAR | NOTE 1 | | | | | | 127 |
| * | BRAKE LIGHT SWITCH | | | | | | | 128 |
| | BRAKE SYSTEM | | | | | | | 116 |
| * | REVERSE LOCK SYSTEM | | | | | | | 109 |
| | SKID PLATES, ENGINE GUARD | | | | | | | 137 |
| * | CLUTCH SYSTEM | | | | | | | 108 |
| * | SUSPENSION | | | | | | | — |
| * | SPARK ARRESTER | | | | | C | C | 115 |
| * | NUTS, BOLTS, FASTENERS | | | | | | | — |
| ** | WHEELS/TIRES | | | | | | | — |
| ** | STEERING SHAFT HOLDER BEARINGS | | | | | | | — |
| ** | STEERING SYSTEM | | | | | | | — |

- * Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 190).
- ** In the interest of safety, we recommend these items be serviced only by your Honda dealer.