

D U	FREQUENCY ITEMS	Whichever comes first		INITIAL	REGULAR		Refer to page	
		⇨			MAINTENANCE	MAINTENANCE INTERVAL		
			mi	100	600	1200		
			km	150	1000	2000		
NOTE	HOURS	20	100	200				
NON EMISSION RELATED ITEM	REAR FINAL GEAR CASE OIL				(R: EVERY 2YEARS)		100	
	* BRAKE FLUID	(NOTE3)					112	
	* BRAKE SHOE WEAR	(NOTE2)					117	
	BRAKE SYSTEM						109 – 118	
	* REVERSE LOCK SYSTEM						104	
	SKID PLATES, ENGINE GUARD						125	
	* CLUTCH SYSTEM						103	
	* SUSPENSION						–	
	* SPARK ARRESTER				C	C	126	
	* NUTS, BOLTS, FASTENERS						–	
	** WHEELS/TIRES						119 – 123	
	** STEERING SHAFT HOLDER BEARINGS						–	
** STEERING SYSTEM						–		

* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

- NOTES: 1. Service more frequently after riding in very wet or muddy conditions.
 2. Service more frequently when riding in dusty areas, sand or snow.
 3. Replace every 2 years. Replacement requires mechanical skill.