




## Controls & Features

### Start Button



#### LEFT HANDLEBAR

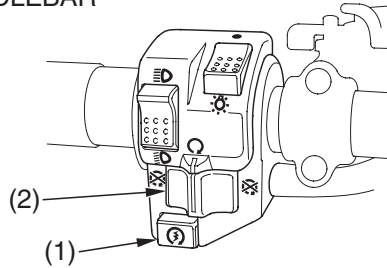

- (1) start button  
(2) engine stop switch

- START  
 OFF  
 RUN

The start button (1) is used for starting the engine. Pushing the button in starts the engine. See *Starting Procedure*, page 47.

When the start button is pushed, the starter motor will crank the engine. The starter motor will operate even if the engine stop switch is in the OFF ( ) position when the start button is pushed.

### Engine Stop Switch



The engine stop switch (2) is used to stop the engine in an emergency. To operate, slide the switch to the OFF ( ) position. The switch must be in the RUN ( ) position to start the engine, and it should normally remain in the RUN ( ) position even when the engine is OFF.

If your ATV is stopped with the ignition switch ON ( ) and the engine stop switch OFF ( ), the battery will discharge. Turn the ignition switch OFF ( ) to prevent battery discharge.

## 18 Indicators & Controls

