


Starting & Stopping the Engine

- 3. Immediately after the engine starts, push the choke knob down to the halfway position (B).
- 4. Warm up the engine by opening and closing the throttle slightly.
- 5. After the engine has warmed up, push the choke knob down all the way to fully OFF (C).
- 6. If idling is unstable, open the throttle slightly.

High Air Temperature 35°C (95°F) or above

LEFT HANDLEBAR

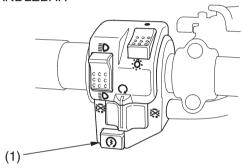

(1) start button

- 1. Do not use the choke.
- 2. With the throttle slightly open, press the start button (1).

48 Basic Operation & Riding

