

# **Spark Plug**

## **Spark Plug Recommendation**

standard spark plug	DPR8EA-9 (NGK)	or
	X24EPR-U9 (DENSO)	
for cold climate	DPR7EA-9 (NGK)	or
(below 5°C, 41°F)	X22EPR-U9 (DENSO)	

Use only the recommended type of spark plug in the recommended heat range.


## NOTICE

Using spark plugs with an improper heat range can cause engine damage.

## **Spark Plug Inspection & Replacement**

Refer to Safety Precautions on page 75.

- 1. Clean any dirt from around the spark plug base.
- 2. Disconnect the spark plug cap (1). Take care to avoid damaging the spark plug wire when disconnecting the cap.
- 3. Using a spark plug wrench provided in the tool kit, remove the spark plug.

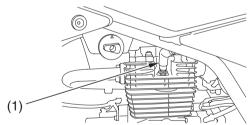

(1) spark plug cap

### 112 Servicing Your Honda

