

| | | SERVICE PERIOD | | Refer to page |
|---|--------|--|---|----------------|
| | | INITIAL (First week of operation or 30 operating hours) (NOTE 1) | REGULAR (Every 30 operating days or 100 operating hours) (NOTE 1) | |
| I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean R: Replace A: Adjust L: Lubricate | EVERY | | | |
| * BRAKE PAD WEAR | | YEAR 1 (NOTE 2, 3) | | 118, 119 |
| BRAKE SYSTEM | | I | I | 22, 115–121 |
| * REVERSE LOCK SYSTEM | | I | I | 109 |
| SKID PLATES, ENGINE GUARD | | | I | 128 |
| * CLUTCH SYSTEM | | I | I | 107, 108 |
| * SUSPENSION | | | I | 26 |
| * SPARK ARRESTER | | | C | 130 |
| * NUTS, BOLTS, FASTENERS | | I | I | — |
| ** WHEELS/TIRES | | I | I | 122–125 |
| ** STEERING SHAFT HOLDER BEARINGS | YEAR 1 | | | — |
| ** STEERING SYSTEM | YEAR 1 | | | — |

* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

- NOTES:
1. Whichever comes first.
 2. Service more frequently when riding in dusty areas, sand or snow.
 3. Service more frequently after riding in very wet or muddy conditions.
 4. Replace every 2 years. Replacement requires mechanical skill.

MAINTENANCE PRECAUTIONS

Before beginning any maintenance or repairs, read the appropriate instructions and warnings and make sure you have all the tools and materials you will need.

Choose a clean area that is level and has good ventilation and good light. Make sure the engine is off unless otherwise instructed. If you need to replace any parts, remember to use only new genuine Honda parts or their equivalents.