

I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean            R: Replace A: Adjust          L: Lubricate		EVERY	INITIAL SERVICE PERIOD (First week of operation)	REGULAR SERVICE PERIOD (Every 30 operating days)	Refer to page
*	BRAKE SHOE WEAR	YEAR I (NOTE 2)			67
	BRAKE SYSTEM		I	I	63-68
*	REVERSE LOCK SYSTEM		I	I	69
*	CLUTCH SYSTEM		I	I	68
	ENGINE GUARD, SKID PLATES			I	69
*	SUSPENSION			I	—
*	SPARK ARRESTER	(NOTE 3)		C	70
*	NUTS, BOLTS, FASTENERS		I	I	—
**	WHEELS/TIRES		I	I	—
**	STEERING SHAFT HOLDER BEARINGS	YEAR I			—
**	STEERING SYSTEM	YEAR I			—

\* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICAL HONDA SERVICE MANUAL.

\*\* IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

NOTES: 1. Service more frequently when riding in dusty areas, sand or snow.

2. Service more frequently after riding in very wet or muddy conditions.

3. USA only.