

5. Reassemble by reversing the disassembly sequence.
6. Turn the fuel valve and fuel cap vent lever ON, and check for leaks. Correct if necessary.

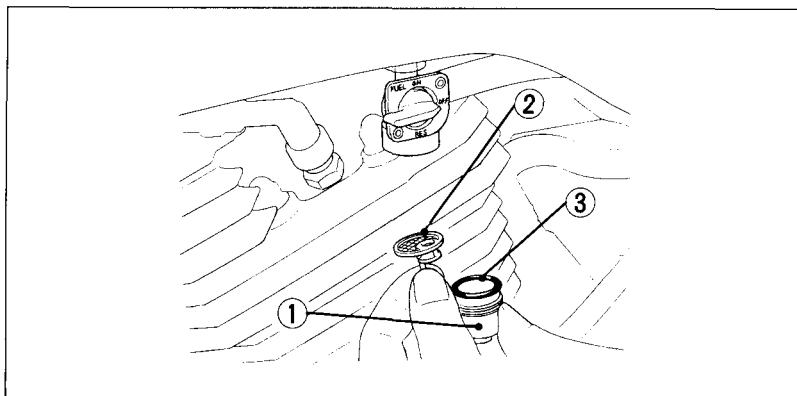


Fig. 4-3

(1) Fuel strainer cup

(2) Strainer screen

(3) O-ring

While reading this manual, remember:

**▲ WARNING**

**Indicates a strong possibility that serious injury or death may result if instructions are not followed.**