

		SERVICE PERIOD		Refer to page
		INITIAL (First week of operation or 30 operating hours) (NOTE 1)	REGULAR (Every 30 days or 100 operating hours) (NOTE 1)	
I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean R: Replace A: Adjust L: Lubricate	EVERY			
* BRAKE SHOE WEAR	YEAR 1 (NOTE 3)			119 – 121 124 – 127
BRAKE SYSTEM		I	I	25, 119 – 128
* REVERSE LOCK SYSTEM		I	I	113
SKID PLATES			I	135
* CLUTCH SYSTEM		I	I	112
DRIVE SHAFT BOOTS			I	–
* SUSPENSION			I	--
* SPARK ARRESTER			C	136, 137
* NUTS, BOLTS, FASTENERS		I	I	--
** WHEELS/TIRES		I	I	129 – 133
** STEERING SHAFT HOLDER BEARINGS	YEAR 1			–
** STEERING SYSTEM	YEAR 1			–

* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

- NOTES:
1. Whichever comes first.
 2. Service more frequently when riding in dusty areas, sand or snow.
 3. Service more frequently after riding in very wet or muddy conditions.
 4. Replace every 2 years. Replacement requires mechanical skill.

MAINTENANCE PRECAUTIONS

Before beginning any maintenance or repairs, read the appropriate instructions and warnings and make sure you have all the tools and materials you will need.

Choose a clean area that is level and has good ventilation and good light. Make sure the engine is off unless otherwise instructed. If you need to replace any parts, remember to use only new genuine Honda parts or their equivalents.