

5. Reassemble by reversing the disassembly sequence.
6. Check to be sure the O-ring is in place.
7. Turn the fuel valve and fuel cap vent lever ON, and check for leaks. Correct if necessary.

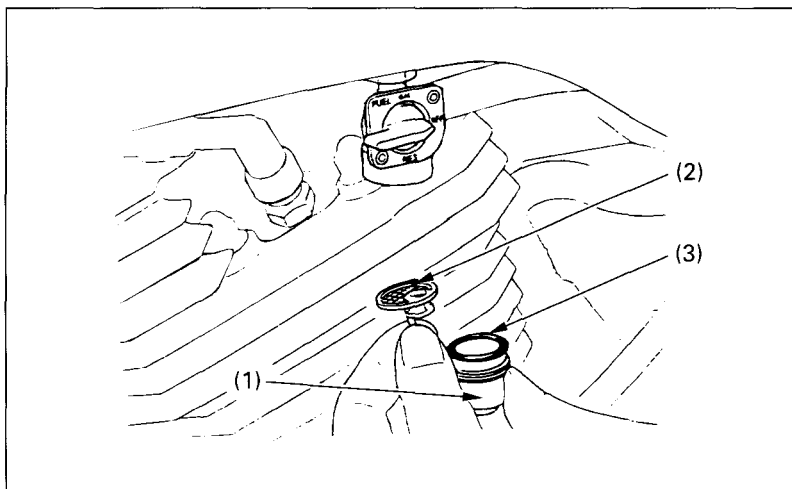


Fig. 4-3 (1) Fuel strainer cup (2) Strainer screen (3) O-ring

While reading this manual, remember:

⚠ WARNING Indicates a strong possibility that serious injury or death may result if instructions are not followed.