

6. Wash the air cleaner in nonflammable or high flash point solvent and allow it to dry thoroughly.

⚠ WARNING

POTENTIAL HAZARD

Using gasoline or low flash point solvents for cleaning ATV parts.

WHAT CAN HAPPEN

A fire or explosion could result.

HOW TO AVOID THE HAZARD

Use only a nonflammable or high flash point solvent to clean ATV parts.

7. Soak the air cleaner in Pro Honda Foam Filter Oil or an equivalent [Canadian Vehicles: gear oil (SAE 80–90)] until saturated, then squeeze out the excess oil.

CAUTION:

Twisting the air cleaner when squeezing out excess oil could damage the air cleaner.

8. Reassemble by reversing the disassembly sequence.

Dust Cover (California only)

Do not push the dust cover (1) (Fig. 4-7) into the air cleaner housing (2). If the dust cover is dirty, clean it.

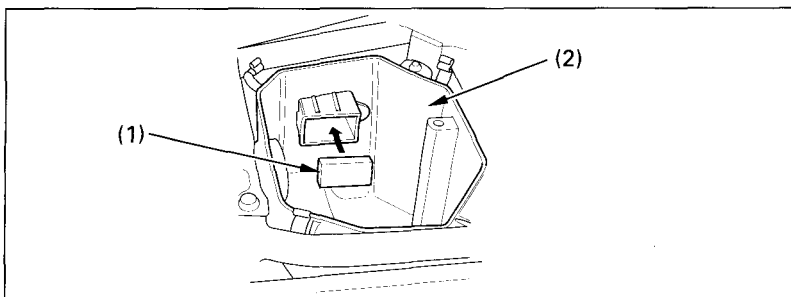


Fig. 4-7

(1) Dust cover

(2) Air cleaner housing