

## FUEL STRAINER SCREEN

The fuel strainer (Fig. 4-3) is in the fuel valve. The strainer has a fine mesh screen (2) which prevents dirt from entering the carburetor passages. *Dirt which accumulates in the screen must be removed periodically, or the fuel flow will eventually be restricted.*

To clean the fuel strainer screen:

1. Turn the fuel valve OFF.
2. Remove the fuel strainer cup (1) and the O-ring (3).
3. Remove the strainer screen (2).
4. Wash the screen in nonflammable or high flash point solvent.

### **▲ WARNING**

#### **POTENTIAL HAZARD**

**Using gasoline or low flash point solvents for cleaning ATV parts.**

#### **WHAT CAN HAPPEN**

**A fire or explosion could result.**

#### **HOW TO AVOID THE HAZARD**

**Use only a nonflammable or high flash point solvent to clean ATV parts.**