Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean A: adjust L: lubricate R: replace

FREQUENCY		WHICHEVER COMES FIRST km ⇒ mi		INITIAL MAINT. 150 100		ULAR NTERVAL 2000 1200	NL Refer to	
		NOTE	HOURS	20	100	200	page	
*	FUEL LINE					i		
*	THROTTLE OPERATION						122	
*	CARBURETOR CHOKE		, ,				124	
	AIR CLEANER	NOTE 1			С	С	117	
	AIR CLEANER HOUSING	NOTE 2			l l	1	121	
L	DRAIN TUBE							
	SPARK PLUG				1	T	128	
*	VALVE CLEARANCE				1	1	131	
	ENGINE OIL			R	R	R	107	
	ENGINE OIL FILTER			R	R	R	110	
*	ENGINE IDLE SPEED			1			127	

^{*} Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Shop Manual.