

# If the Oil High Temperature Indicator Lights

---

Normally, the oil high temperature indicator will only light momentarily when you turn the ignition ON ( I ). Occasionally, it may flicker at or near idling speed.

Oil high temperature may be caused by restriction of air flow over the engine (such as mud caked on the cooling fin), extended idling, an oil leak, a low oil level, or extended operation under adverse conditions.

If the indicator comes on while you're riding, don't ignore it. Pull safely to a stop. Stop the engine as soon as it's safe to do so, and let it cool.

## NOTICE

*Continuing to ride with oil high temperature can adversely affect the service life of the engine.*

- Check for any restriction of air flow over the engine.
- Check for an oil leak.
- Check the oil level. If necessary, add the recommended oil (page 109) to the upper level mark. If you must leave your ATV to get oil, secure it as much as possible.
- Start the engine, and check that the oil high temperature indicator goes off.

If the indicator goes off — resume riding. If there is a leak — do not ride the ATV until the leak is repaired by Honda dealer.