


# If a Fuse Blows

---

## Main Fuse Access

1. To prevent an accidental short circuit, turn the ignition switch OFF (○) before checking or replacing the fuses.
2. Remove the seat (page 102).
3. Remove the rear fender lid (page 157).
4. To access the main fuse (2) (3), remove the fuse box cover (4).

## UNDER SEAT

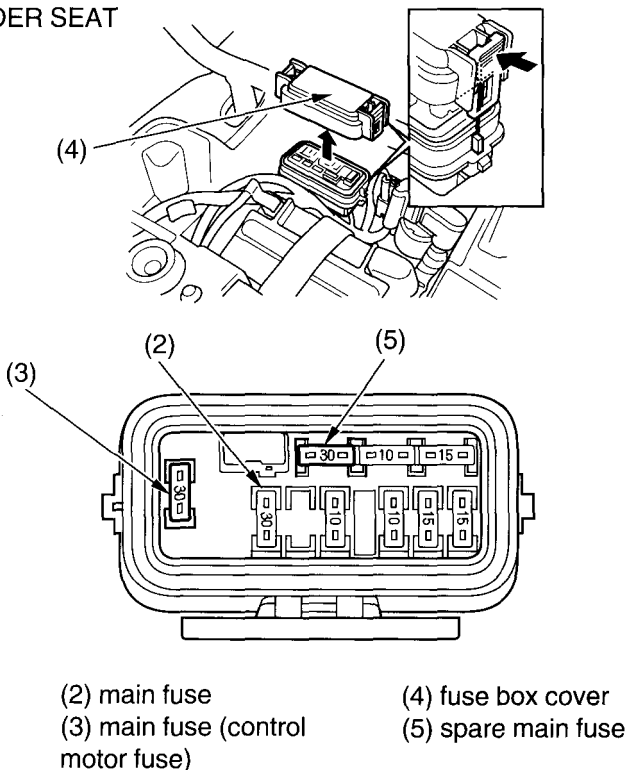

(2) main fuse

(3) main fuse (control  
motor fuse)

(4) fuse box cover

(5) spare main fuse

5. Pull the main fuse out.

If it is blown, install the spare main fuse (5).