

Maintenance Schedule

ITEMS		FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
			FIRST ⇒ NOTE	mi	100	600	1200	
				km	150	1000	2000	
			HOURS	20	100	200		
NON EMISSION RELATED ITEMS		DRIVESHAFT BOOTS						153
		REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				R: (EVERY 2 YEARS)		112, 114
	*	BRAKE FLUID	NOTE 3					132
	*	BRAKE SHOE WEAR	NOTE 1					143
		BRAKE SYSTEM						132
	*	REVERSE LOCK SYSTEM						125
		SKID PLATES, ENGINE GUARD						152
	*	CLUTCH SYSTEM						124
	*	SUSPENSION						—
	*	SPARK ARRESTER				C	C	131
	*	NUTS, BOLTS, FASTENERS						—
	**	WHEELS/TIRES						145
	**	STEERING SHAFT HOLDER BEARINGS						—
	**	STEERING SYSTEM						—

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 210).

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.