

## Tire Tread Condition

To check the condition of a tire tread, measure the groove depth (1) (Fig. 4-36) in the center of the tire, or check the wear indicator (2). The minimum tread depth is 3/16 in (4 mm). When the tread depth is less than recommended, the tire should be replaced.

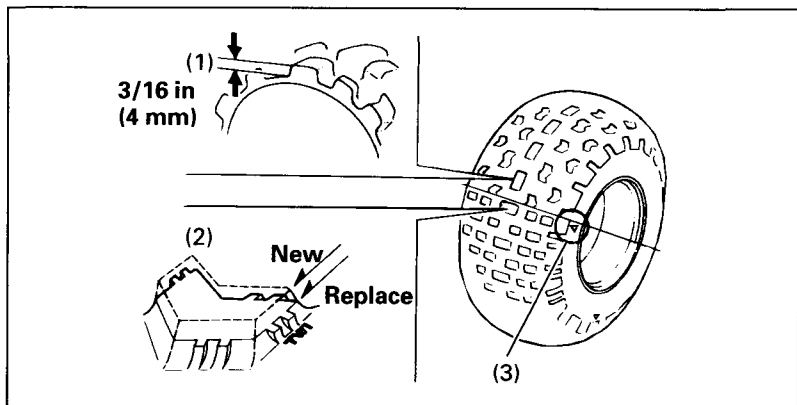


Fig. 4-36 (1) Groove depth  
(2) Wear indicator

(3) Wear indicator  
location mark