

MAINTENANCE SCHEDULE

	FREQUENCY ITEMS	Whichever comes first ⇒	INITIAL		REGULAR		Refer to page
			MAINTENANCE	MAINTENANCE INTERVAL	MAINTENANCE INTERVAL	MAINTENANCE INTERVAL	
		NOTE	HOURS	mi 100 km 150	600 1000	1200 2000	
EMISSION RELATED ITEMS	* FUEL LINE					I	--
	* THROTTLE OPERATION					I	98
	* CARBURETOR CHOKE					I	103
	AIR CLEANER	(NOTE 1)			C	C	99 – 101
	AIR CLEANER HOUSING DRAIN TUBE	(NOTE 2)			I	I	102
	SPARK PLUG				I	I	114 – 115
	* VALVE CLEARANCE			I	I	I	115
	ENGINE OIL			R	R	R	36, 106 – 110
	ENGINE OIL FILTER			R	R	R	108 – 110
	* ENGINE IDLE SPEED				I	I	I

I: Inspect and Clean, Adjust,
Lubricate or Replace if necessary.

C: Clean R: Replace

A: Adjust L: Lubricate