

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇔ NOTE	INITIAL			Refer to page		
			MAINT. INTERVAL					
			mi	600	1200			
			km	1000	2000			
		HOURS	20	100	200			
EMISSION RELATED ITEMS	* FUEL LINE				I	--		
	* THROTTLE OPERATION				I	119		
	* CARBURETOR CHOKE				I	121		
	AIR CLEANER	NOTE 1			C	C	114	
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	118	
	SPARK PLUG				I	I	125	
	* VALVE CLEARANCE				I	I	I	128
	ENGINE OIL				R	R	R	103
	ENGINE OIL FILTER				R	R	R	107
	* ENGINE IDLE SPEED				I	I	I	124

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 204).