

SPARK ARRESTER (USA only)

The exhaust system must be periodically purged of accumulated carbon.

1. Remove the spark arrester bolts (1) and the muffler lid (2).
2. Start the engine and rev approximately twenty times.



- (1) Bolts
(2) Muffler lid

WARNING

- * *Do not perform this operation immediately after the engine has been run because the exhaust system becomes very hot.*
 - * *Because of the increased fire hazard ensure that there are no combustible materials in the area when purging the spark arrester.*
 - * *Wear eye protection.*
 - * *Do not stand behind the vehicle while purging the carbon from the spark arrester.*
 - * *Never run the engine in a closed area. The exhaust contains poisonous carbon monoxide gas.*
3. After clearing the spark arrester of carbon, reinstall the muffler lid and fasteners.