


4. Unscrew the bolts (4) and remove the cross member (5).
5. Loosen the connecting tube band screws (6) at the air cleaner and carburetor, and remove the connecting tube (8) by removing the bolt (7).

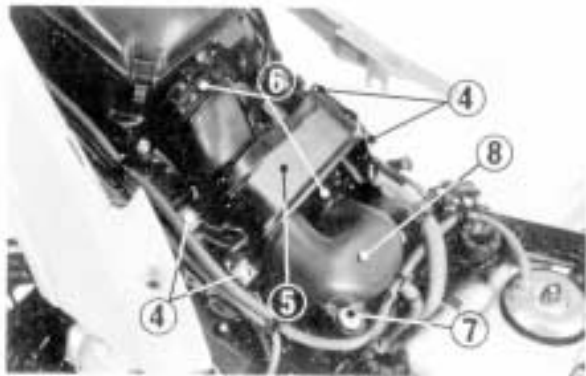

- | | |
|------------------|---------------------|
| (4) Bolts | (7) Mount bolt |
| (5) Cross member | (8) Connecting tube |
| (6) Band screws | |

6. Loosen the carburetor insulator band screw (9) and remove the carburetor from the cylinder head.

NOTE:

Do not let dirt and dust enter the engine through the intake port.



- | |
|-------------------------------------|
| (9) Carburetor insulator band screw |
|-------------------------------------|