


Front Wheel Removal

1. Place a support block under the engine to raise the front wheels off the ground.
2. Loosen the wheel nuts (1) and remove the wheels.

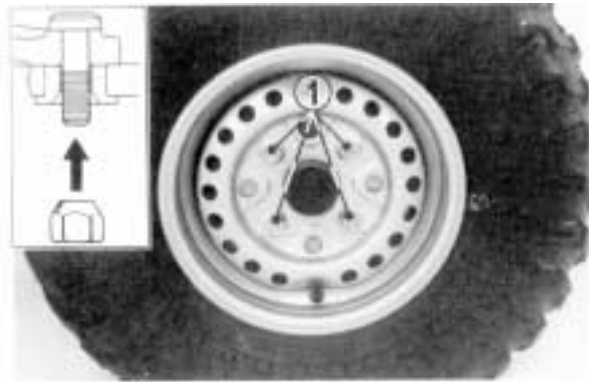

(1) Wheel nuts

Installation Notes:

Reinstall the front wheels and tighten the wheel nuts (1) in a crsscross pattern to 60–70 N·m (6.0–7.0 kg·m, 43-50 ft·lb).

WARNING

- * *If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly.*
- * *Install the wheel nuts with their tapers on the inside as shown.*