

Rear Wheel Removal


1. Place a support block under the vehicle and raise the rear wheels off the ground.
2. Loosen the wheel nuts (1).
3. Remove the wheels.

Installation Notes:

Reinstall the rear wheels and tighten the wheel nuts (1) in a cross pattern to 60–70 N·m (6.0–7.0 kg-m, 43–50 ft-lb).

WARNING

- * *If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly.*
- * *Install the wheel nuts with their tapers on the inside as shown.*

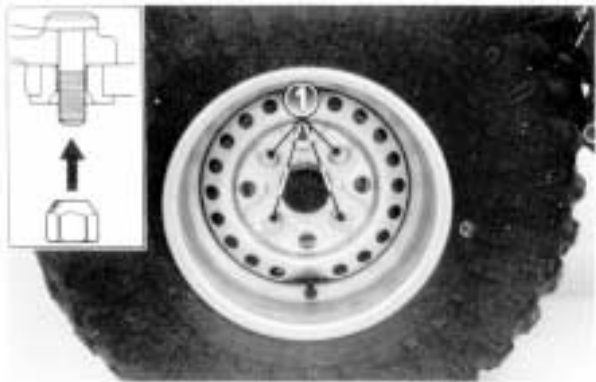

(1) Wheel nuts