

F

| | |
|---|---------|
| Final gear case oil | 117 |
| Flag pole bracket | 39 |
| Flooded engine | 70 |
| Fuel | |
| Fuel fill cap | 35, 100 |
| Fuel gauge | 34 |
| Fuel recommendations | 102 |
| Fuel tank capacity | 100 |
| Fuel valve | 36 |
| High altitude fuel mixture adjustment | 111 |
| Refueling | 100 |
| Reserve fuel supply | 36 |
| Fuses | |
| Location | 125 |
| Replacement, main fuse | 125 |
| Replacement, main fuse (Electric shift motor) | 126 |
| Replacement, sub fuses | 127 |

G

| | |
|--------------------------------|--------|
| Gear change tool | 74, 99 |
| Gasoline (see Fuel) | |
| Gearshift switch | |
| Downshift switch | 31, 71 |
| Upshift switch | 31, 71 |
| Gearshifting | 31, 71 |
| Gearcase oil | |
| Rear final gear case oil | 117 |
| Gear position indicator | 27 |

H

| | |
|---|-----|
| Headlight switches | 21 |
| Helmet holder | 38 |
| High altitude fuel mixture adjustment | 111 |
| Hills | |
| Riding across slopes | 90 |
| Riding down hills | 88 |
| Riding up hills | 81 |
| Stopping on hills | 83 |
| Turning on slopes | 91 |
| Hourmeter | 29 |