

	FREQUENCY	ITEMS	Whichever comes first ↷	INITIAL	REGULAR		Refer to page	
				MAINTENANCE	MAINTENANCE INTERVAL			
				mi	100	600		1200
				km	150	1000		2000
NOTE	HOURS	20	100	200				
NON EMISSION RELATED ITEMS		REAR FINAL GEAR CASE OIL				(R: EVERY 2YEARS)		117
	*	BRAKE FLUID	(NOTE3)					132
	*	BRAKE SHOE WEAR	(NOTE1)					137
		BRAKE SYSTEM						129 – 138
	*	REVERSE LOCK SYSTEM						121
		SKID PLATES, ENGINE GUARD						145
	*	CLUTCH SYSTEM						120
	*	SUSPENSION						–
	*	SPARK ARRESTER				C	C	146
	*	NUTS, BOLTS, FASTENERS						–
	**	WHEELS/TIRES						139 – 143
	**	STEERING SHAFT HOLDER						–
	**	BEARINGS						–
**	STEERING SYSTEM						–	

* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

**IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

- NOTES:
1. Service more frequently when riding in dusty areas, sand or snow.
 2. Service more frequently after riding in very wet or muddy conditions.
 3. Replace every 2 years. Replacement requires mechanical skill.