

Braking

Your ATV is equipped with drum brakes on both front wheels which are hydraulically-activated by operating the right brake lever. A single drum brake on the rear axle housing is mechanically-activated by depressing the brake pedal or operating the left brake lever.

TRX350FE only:

Although the front and rear brakes have separate controls, your ATV's four-wheel drive interconnects all four wheels. So operating any brake control will cause braking at both the front and rear wheels.

As a general rule, the front braking system provides about 70 percent of total stopping power.

For full braking effectiveness, use both the pedal and lever simultaneously. Using both braking systems will stop your ATV faster with greater stability.

To slow or stop, apply the brake lever and brake pedal smoothly, while downshifting to match your speed.

Gradually increase braking as you feel the brakes slowing your speed. The increase in engine compression from downshifting will help slow your ATV.

Applying the brakes too hard may cause the wheels to lock and slide, reducing control of your ATV. If this happens, release the brake controls, steer straight ahead until you regain control, then reapply the brakes more gently.

When possible, reduce your speed or complete braking before entering a turn. Avoid braking or closing the throttle quickly while turning. Either action may cause one or more wheels to slip and reduce your control of your ATV.