

MAINTENANCE SCHEDULE

		FREQUENCY ITEMS	Whichever comes first ↕ NOTE	INITIAL	REGULAR		Refer to page
				MAINTENANCE	MAINTENANCE INTERVAL		
				mi	600	1200	
				km	1000	2000	
		HOURS	20	100	200		
EMISSION RELATED ITEMS	*	FUEL LINE				I	—
	*	THROTTLE OPERATION				I	98
	*	CARBURETOR CHOKE				I	103
		AIR CLEANER	(NOTE 1)		C	C	99–101
		AIR CLEANER HOUSING DRAIN TUBE	(NOTE 2)		I	I	102
		SPARK PLUG			I	I	112–113
	*	VALVE CLEARANCE		I	I	I	113
		ENGINE OIL		R	R	R	36, 106–110
		ENGINE OIL FILTER		R	R	R	108–110
	*	ENGINE IDLE SPEED		I	I	I	104

I: Inspect and Clean, Adjust,
Lubricate or Replace if necessary.
C: Clean R: Replace
A: Adjust L: Lubricate