
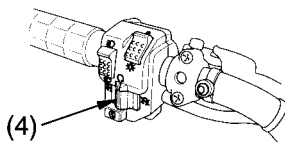
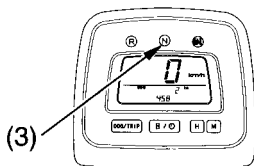
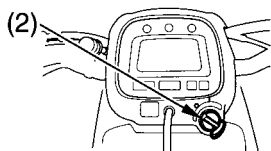


Starting & Stopping the Engine

Always follow the proper starting procedure described below.

For your safety, avoid starting or operating the engine in an enclosed area such as a garage. Your ATV's exhaust contains poisonous carbon monoxide gas which can collect rapidly in an enclosed area and cause illness or death.

Preparation

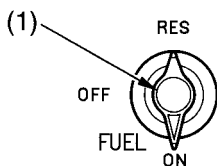

- (1) fuel valve
(2) ignition switch

- (3) neutral indicator
(4) engine stop switch

1. Before starting, Select a level surface and lock the parking brake (page 30).
2. Turn the fuel valve (1) and ignition switch (2) to ON (|).

Confirm the following:

- The transmission is in NEUTRAL (neutral indicator (3) light ON).
- The engine stop switch (4) is set to RUN (O).

The oil high temperature indicator should go off a few seconds after the engine starts.