


# Brakes

---

## Adjustment

### RIGHT REAR

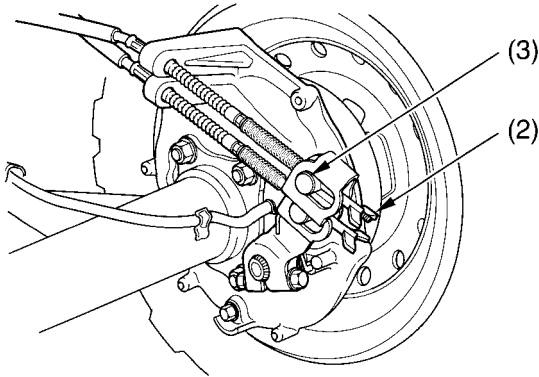

- (2) brake lever adjusting nut
- (3) brake arm pin

Turn the brake lever adjusting nut ( 2 ), located on the brake operating rod at the rear of the frame. Make sure the cutout on the adjusting nut is properly seated on the brake arm pin ( 3 ).

## **Other Inspection**

- Check that the brake lever and brake pedal assemblies are positioned properly and the securing bolts are tight.
- Make sure that the brake cables, brake arm, spring, and fasteners are in good condition.