

## PARTS OPERATION

### POWER CONTROLS

#### Ignition Switch

The ignition switch (Fig. 2-5) is in the center of the handlebars directly in front of the seat.

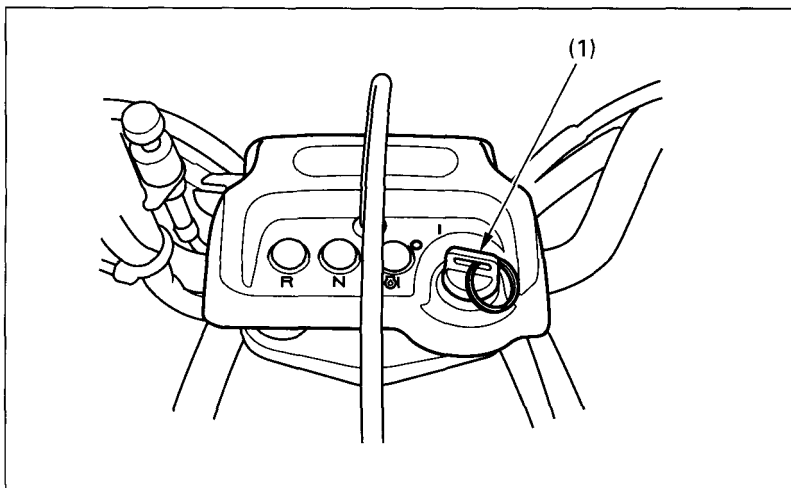


Fig. 2-5

(1) Ignition switch

Key Position	Function	Key Removal
OFF ( O )	The engine and headlight cannot be operated.	The key can be removed.
ON ( I )	The headlights can be turned on.  With the engine stop switch at RUN ( O ) and the transmission in neutral, the engine can be started.	The key cannot be removed.