

Engine Oil & Filter

Changing Engine Oil & Filter

Refer to *Safety Precautions* on page 71.

Your ATV's oil filter has very specific performance requirements. Use a new genuine Honda oil filter specified for your model or a filter of equal quality.

NOTICE


Using the wrong oil filter may result in leaks or premature engine damage.

This procedure requires mechanical skill and professional tools such as a torque wrench and oil filter wrench, as well as a means for disposing of the drained fluid (page 158). If you do not have the skills or the tools, see your Honda dealer.

Drain the Engine Oil:


1. With the ATV on level ground, start the engine and let it idle for a few minutes.
2. Stop the engine, place an oil drain pan under the oil tank and crankcase. Remove the oil filler cap/dipstick, the drain bolt A (1) on the oil tank and drain bolt B (2) on the left crankcase.

RIGHT SIDE

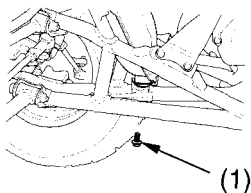

(1) drain bolt A

LEFT SIDE

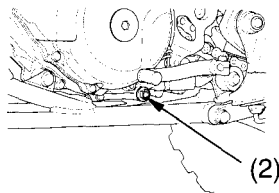

(2) drain bolt B