

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇔ NOTE	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200	
			km	150	1000	2000	
			HOURS	20	100	200	
*	FUEL LINE				I		—
*	THROTTLE OPERATION				I		102
	AIR CLEANER			C	C		99
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 1		I	I		101
	SPARK PLUG	NOTE 2		I	I		110
*	VALVE CLEARANCE		I	I	I		113
	ENGINE OIL		R	R	R		91
	ENGINE OIL FILTER		R	R	R		95
*	ENGINE OIL STRAINER SCREEN IN OIL TANK				C		—
*	ENGINE IDLE SPEED		I	I	I		109

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 198).