

# Brakes


## Brakelight Switch Adjustment

Refer to *Safety Precautions* on page 75 .

### Rear Brake Only:

Check the operation of the rear brakelight switch ( 1 ) at the right side behind the engine from time to time. Remove the right side brakelight switch guard ( 2 ). Adjustment is done by turning the adjusting nut ( 3 ). Turn the nut in direction ( A ) if the switch operates too late and in direction ( B ) if the switch operates too soon.

### RIGHT SIDE

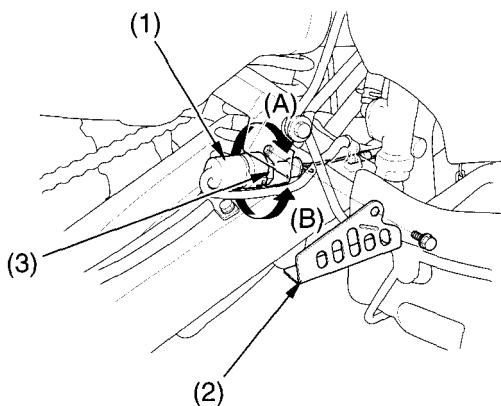

- (1) brakelight switch
- (2) brakelight switch guard
- (3) adjusting nut