

Operation Component Locations


clutch lever/
parking brake lever

parking brake lock lever
parking brake pin

headlight switch

ignition switch

front brake lever

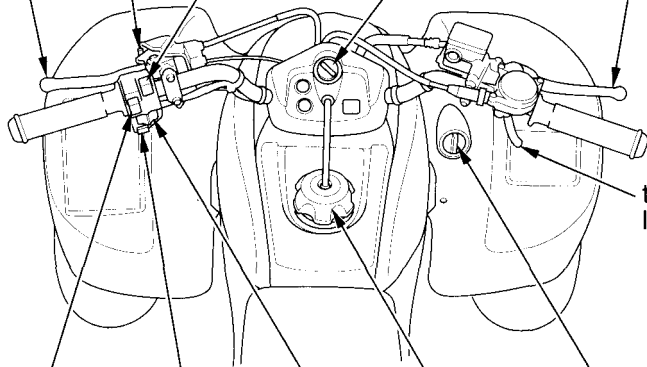

headlight dimmer
switch

throttle
lever

reverse assist knob

engine stop
switch

start button

fuel fill cap