


Engine Oil & Filter


LEFT SIDE

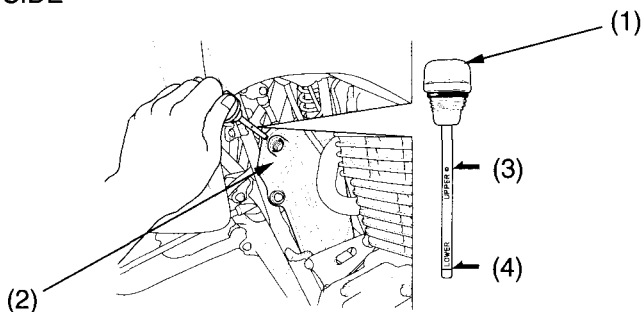

- (1) oil filter cap/dipstick (3) UPPER level mark
(2) oil tank (4) LOWER level mark

The engine contains a crankcase oil level check bolt (5). Remove the bolt and check that the level is flush with the lower edge of the hole. If it is, install and tighten the bolt, start the engine and check the engine oil level. If the crankcase oil level is low, add the recommended engine oil before starting the engine to check the engine oil level.

RIGHT SIDE

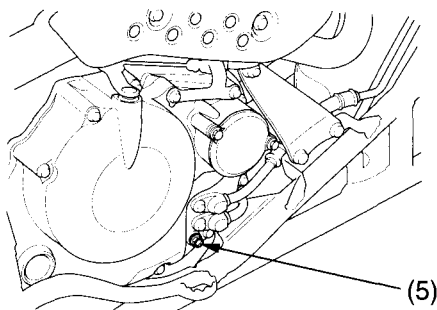

- (5) check bolt